 




Thank you for purchasing this Elite product. You will need the following tools:
Phillips Head Screw Driver • Straight Blade Screw Driver • Rubber Padded Hammer or Mallet

Assembly Instructions









47" WIDE TV STAND, AUDIO/VIDEO COMBINATION UNIT
OVERALL DIMENSIONS: 21" H x 47" W x 18 1/2" D
EL-425: High Gloss Black Lacquer Finish

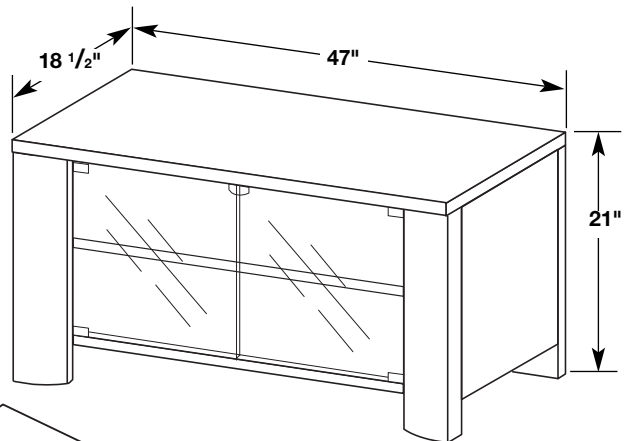









PARTS

- | | |
|------------------------------|------------------------------|
| 1. Top Panel | 5. Back Panel |
| 2. Bottom Panel | 6. Front Legs (2 identical) |
| 3. Side Panels (2 identical) | 7. Back Legs (2 identical) |
| 4. Adjustable Shelf | 8. Glass Doors (2 identical) |

        Hardware for unit assembly

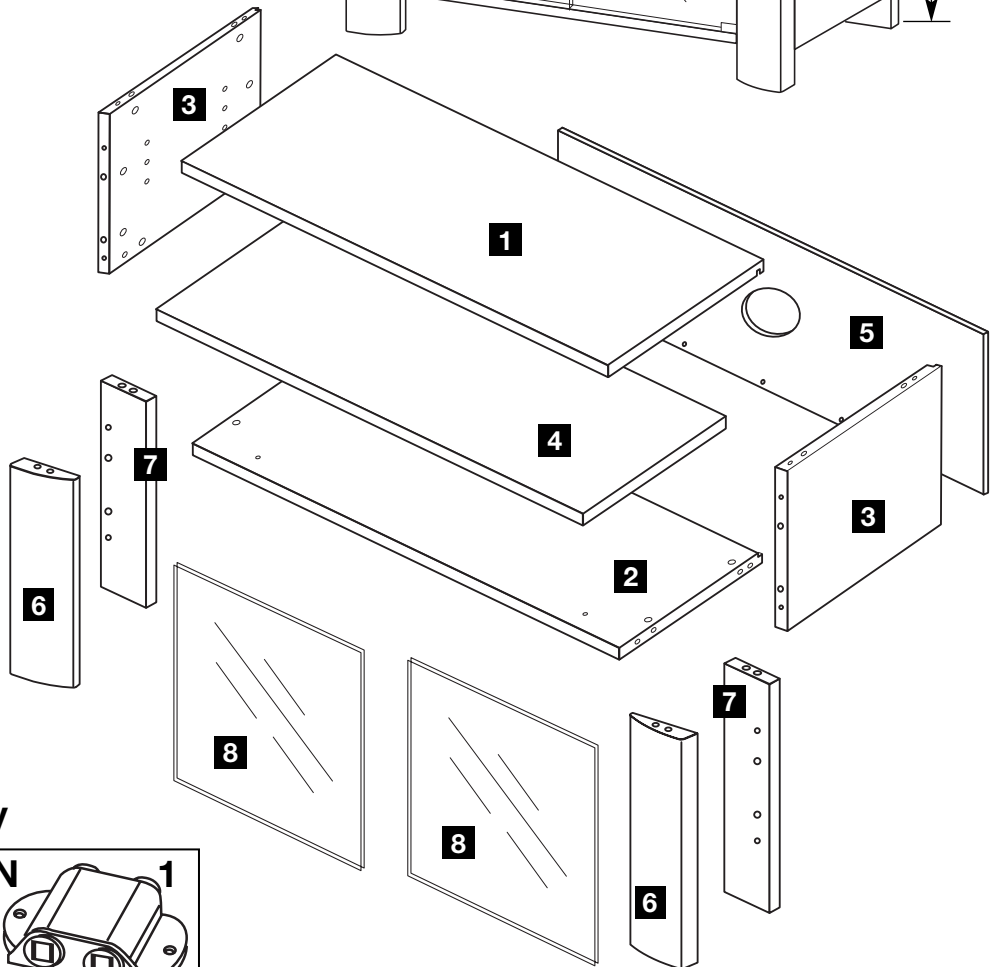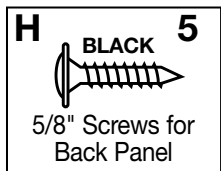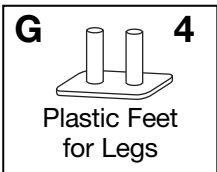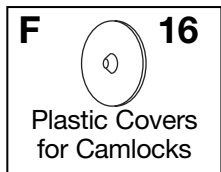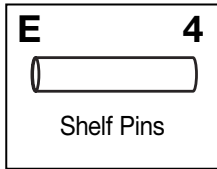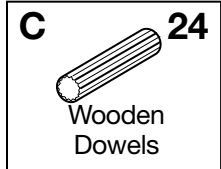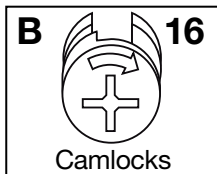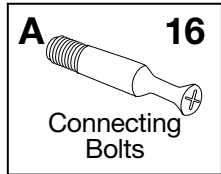


Hardware for door assembly

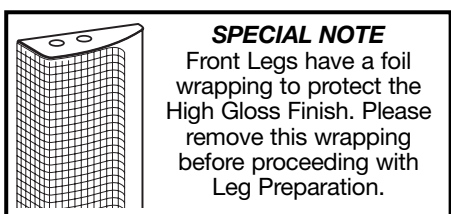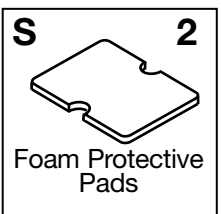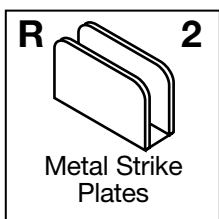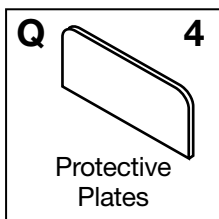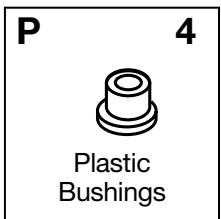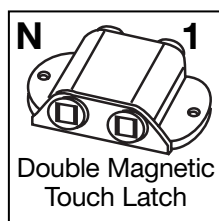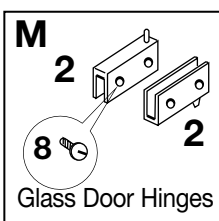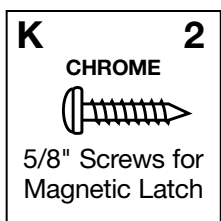        


IMPORTANT NOTES & CAUTIONS/WARNINGS

- Carefully read and follow these instructions for assembly.
- Please handle parts carefully, some parts may be heavy and can have sharp edges – we recommend possibly using cloth protective gloves for extra protection.
- To protect the unit and your flooring surface we recommend working on a padded or carpeted area, you may also use the open box the unit came in for this purpose.
- For proper construction & integrity/assembly and for TV weight support and safety, all connections need to be sufficiently tight. However, do not over-tighten connections to the point of stripping screw threadings. Parts are designed to fit together tightly, however, avoid excessive force but rather align & fit panels together methodically and with patience.
- For some heavy or large units, it may be recommended for 2 people to work together on this assembly.
- It is extremely important to attach the **BACK PANEL** as instructed within this manual. Such panels are crucial for the stability and structural support of the unit.
- Please read additional **important safety information** at the end of this instruction manual.
- We urge you to keep this manual with your unit for future reference.

 1 TOP PANEL PREPARATION

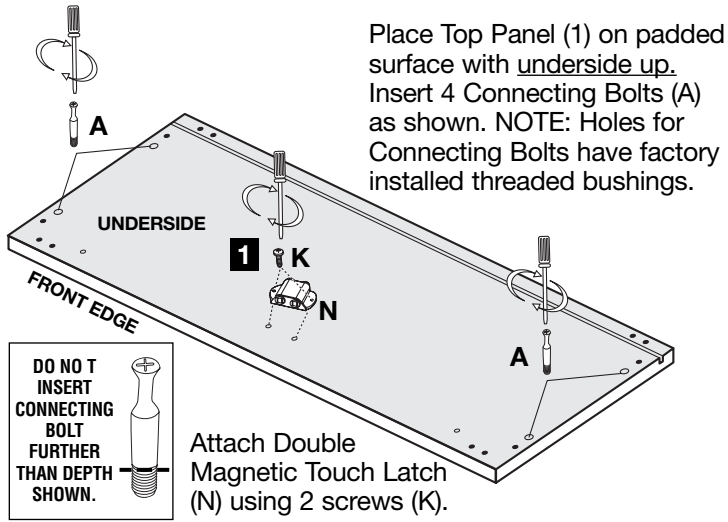

2 BOTTOM PANEL PREPARATION

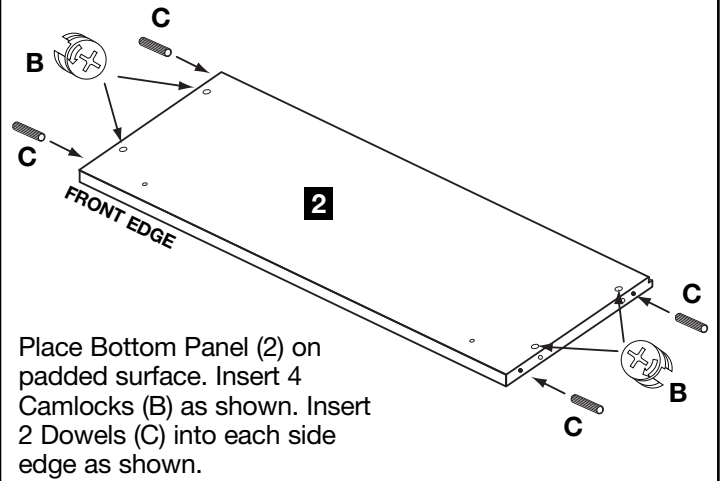 


3 SIDE PANEL PREPARATION

Insert 6 Camlocks (B) and 6 Wooden Dowels (C) into top, and both side edges of each Side Panel (3) as shown.

Insert 2 Connecting Bolts (A) into bottom inside face as shown.

 BE SURE THAT ALL CAMLOCKS ARE POSITIONED WITH THEIR OPENINGS FACING THE OUTER EDGES.

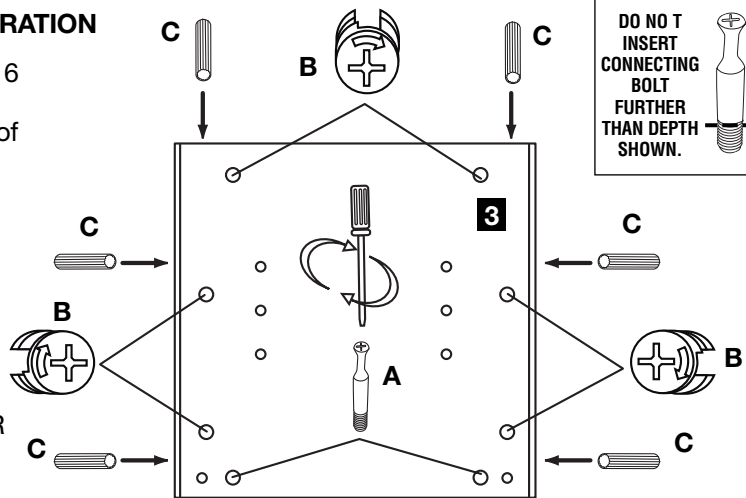


CAMLOCK CONNECTING BOLT PROCEDURE

Be sure to insert Camlocks with the arrow facing the edge.

Align Connecting Bolt with Camlock and join pieces together.

Turn Camlock 180° clockwise to lock. The arrow will now be away from the edge toward the opposite direction.

 
4 FRONT AND BACK LEG PREPARATION



SPECIAL NOTE
Front Legs have a foil wrapping to protect the High Gloss Finish. Please remove this wrapping before proceeding with Leg Preparation.

Holes for Dowels and Connecting Bolts are toward one edge of each Leg which will align with outer edge of unit. Legs face in opposite directions.

 Insert 2 Wooden Dowels (C) into the top of each Front Leg (6) and each Back Leg (7). Insert 2 Connecting Bolts (A) into each Front Leg (6) and each Back Leg (7). Insert 1 Plastic Foot (G) into the bottom of each Front Leg (6) and each Back Leg (7).

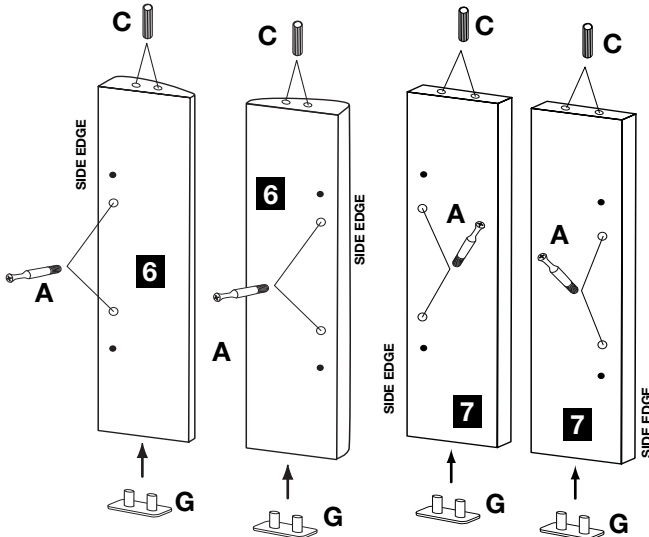


5 ATTACH LEGS TO SIDE PANELS

Align Dowels on side edges of Side Panel (3) and Connecting Bolts of Front Leg (6) and Back Leg (7).


Butt pieces together.

 TURN CAMLOCKS 180° TO LOCK.

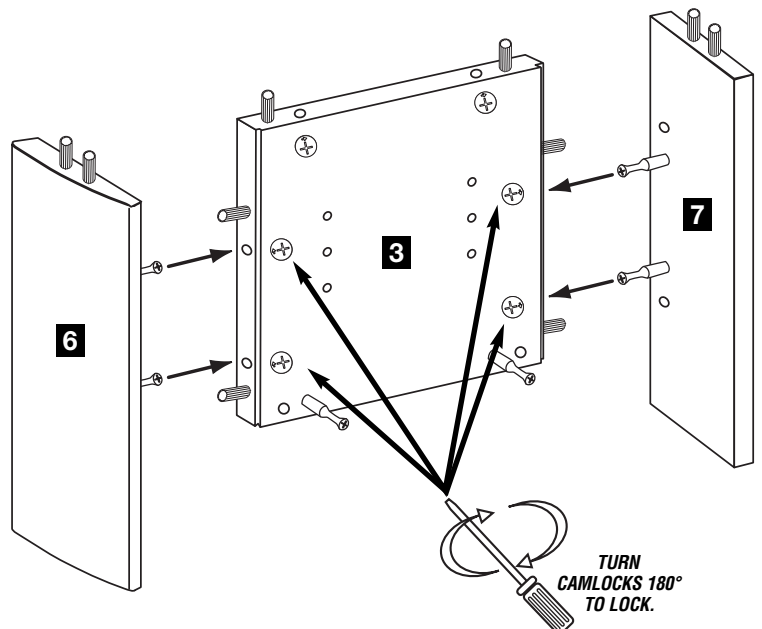

6 ATTACH BOTTOM TO LEG-SIDE ASSEMBLY

 FRONT EDGE OF BOTTOM PANEL HAS HOLES FOR DOOR HINGES. BE SURE FRONT EDGE BUTTS AGAINST FRONT LEG.

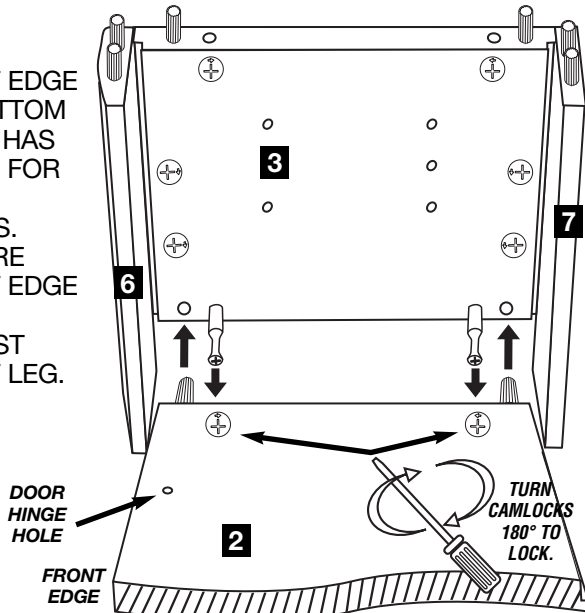


Align Dowels of Bottom Panel (2) with corresponding holes in Side Panel (3) and align connecting bolts of Side Panel (3) with holes on Bottom Panel (2). Butt pieces together. Turn Camlocks 180° to lock.

7 ADD ADJUSTABLE SHELF

Insert 2 Shelf Pins (E) into each Side Panel (3) at desired height.


Rest Adjustable Shelf (4) on Shelf Pins.

 Position Adjustable Shelf (4) toward Front Leg (6) to allow space for Back Panel (5).

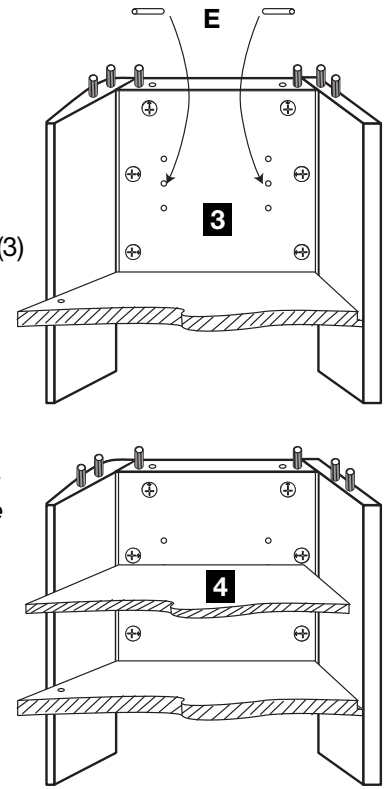


8 ATTACH BACK PANEL

 Slide Back Panel (5) down into grooves of Side Panels (3), behind Adjustable Shelf (4) and in front of Back Legs (7) and into groove of Bottom Panel (2). Be sure holes for screws are on the bottom.

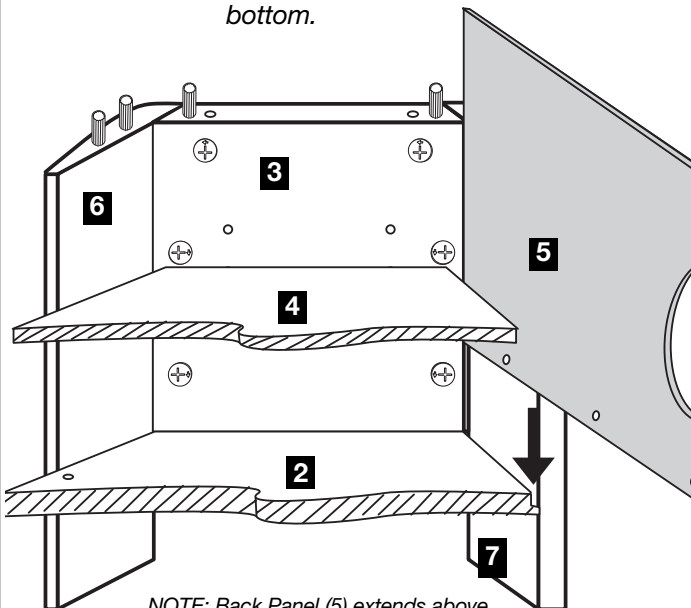

 NOTE: Back Panel (5) extends above Back Legs (7) slightly to fit into groove on underside of Top Panel (1) in Step 9.

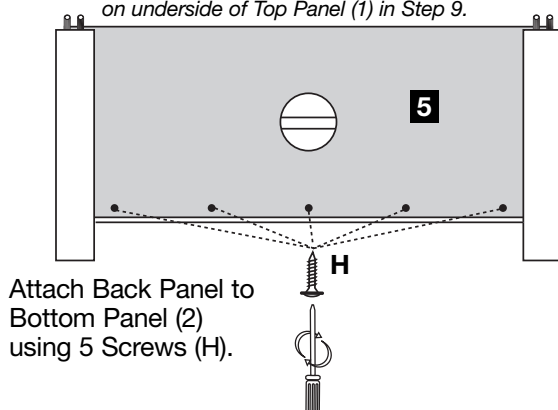


Attach Back Panel to Bottom Panel (2) using 5 Screws (H).

9 ATTACH TOP PANEL


MAKE SURE GROOVE ON BACK EDGE OF TOP PANEL ALIGNS WITH GROOVE ON BACK EDGE OF SIDE PANELS.

 Align Dowels of Front Legs, Back Legs, Side Panel and Connecting Bolts of Top Panel. Butt together. Turn Camlocks on Side Panel 180° to lock.

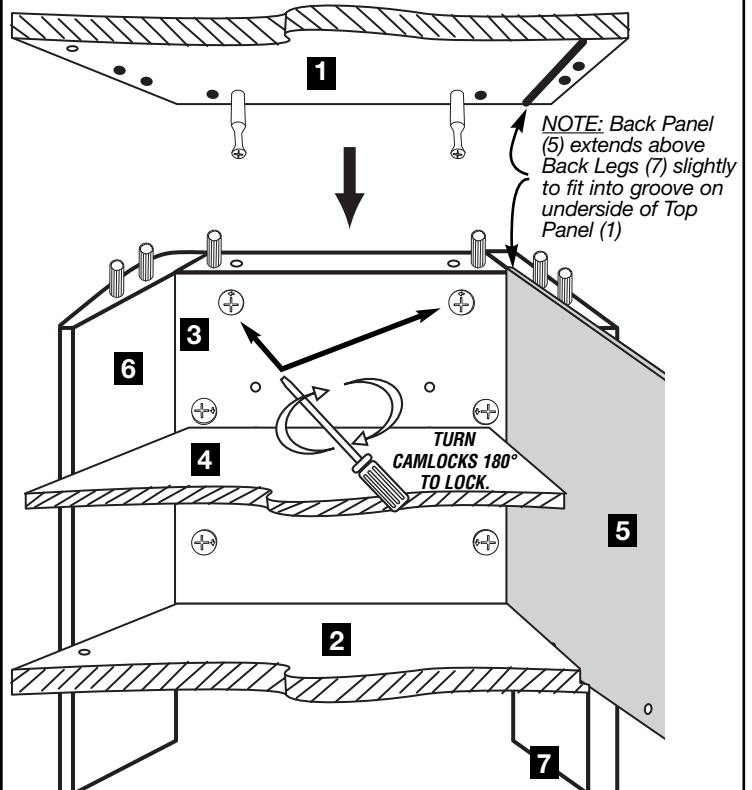


NOTE: Back Panel (5) extends above Back Legs (7) slightly to fit into groove on underside of Top Panel (1)

 
10 ADD GLASS DOORS

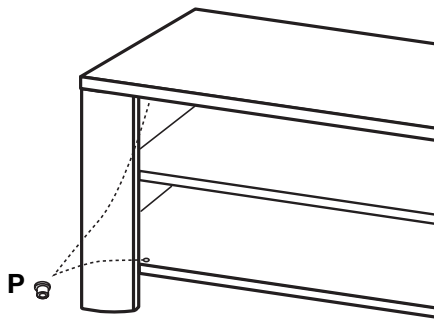

 Insert 2 Plastic Bushings (P) into Top Wooden Panel (1) and 2 Plastic Bushings (P) into Bottom Wooden Panel (2) as indicated. Fit top Hinge (M) over top corner of Glass Door. Slip protective plate (Q) between glass and hinge setting screws. Slightly tighten screws carefully. Insert

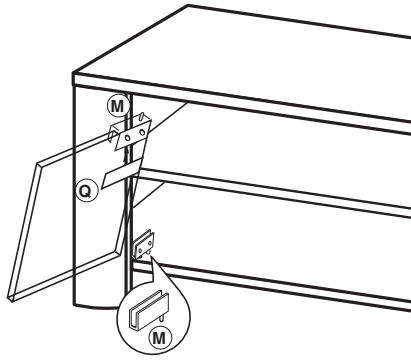

 bottom hinge (M) into bottom Plastic Bushing (P) and slip door into hinge, after inserting top corner. Slip protective plate (Q) between glass and hinge setting screws. Tighten screws carefully. NOTE: If door does not fit properly, loosen setting screws and slide door in hinge as

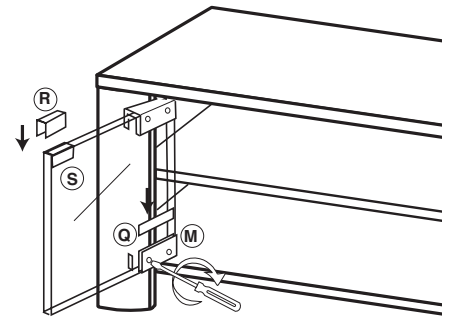

necessary. Make sure setting screws stay in contact with protective plates when tightened. Remove paper backing from foam pad (S) and attach/wrap over top inner corner of door. Do not stretch. Slide metal Strike Plate (R) over pad.

Repeat for Second Door.

11 ADD CAMLOCK COVERS



Add Camlock Covers (F) to all visible Camlocks.

IMPORTANT NOTICE

The top panel surface (Part #1) is designed to be used with TV's and other A/V equipment NOT weighing more than 220 lbs.

The loading weight needs to be evenly distributed across top panel and for optimum stability, place TV in a center position on Top Panel, not unbalanced to the side against edge for example.

Avoid concentration of heavy weight loading, (over 110 lbs.), on a small surface area of less than 31¹/₂" in width.

Also: Note dimensions for Top Panel Surface as listed at the beginning of this manual and read the following "Important Safety Precautions".

Bottom Wooden Panel (Part #2) is designed to be used with A/V components NOT weighing more than 66 lbs.

Part #4, Adjustable Shelf, is designed to be used with A/V components NOT weighing more than 33 lbs.

HOWEVER, for the total unit loading capacity, DO NOT exceed a total of 310 lbs.

IMPORTANT SAFETY PRECAUTIONS

Please carefully read & follow these **important safety information notes** for proper use of the furniture you have just assembled. They are **designed to avoid unsafe conditions** that can result in property damage, bodily injury or death. We therefore urge strict adherence to the following basic principals:

- Install this unit on a flat & level surface only.
- Avoid placing unit in direct sunlight or near heating source. We recommend not placing unit directly against wall but rather leaving a narrow space between unit and wall for proper ventilation of your A/V equipment.
- Do not exceed the above recommended weight loading limits as this can result in sagging or structural failure of the supporting panel leading to unsafe conditions.
- TV screen sizes are measured diagonally, therefore, base foot-print size for specific TV's can not be determined by screen size as they vary from manufacturer to manufacturer. Rather you will need to measure the TV's base foot print and compare it to the top panel surface size of your furniture as listed in this manual.
- Make sure to place TV **within** the surface area of the top panel, a bit inward from the front edge and centered. **Never** use with a TV that is **too large**. **The TV base foot print surface must be able to sit completely on the top panel surface.**
- When choosing locations for stacking A/V components on shelves, make sure to place the heaviest A/V equipment on the lowest possible shelves/bottom panels first.
- **Children should never be allowed to climb on or play with this furniture or/and the TV.** This can result in an unsafe situation which may lead to the TV and/or the furniture itself to become unsteady, slip, tip or fall over. Avoid using higher shelves or the top surface of the TV for objects that may tempt children to reach and climb. Such items can include toys, food, as well as remote controls, etc. Proper supervision and common sense is always required.
- We recommend avoiding bumping into glass with force or dropping or chipping edges etc. Special caution should be given to glass corners, both, for protection of glass as well as most importantly to avoid the possibility of injuries resulting from strong impacts against corners especially with children. Doors should be opened & closed gently. (Tempered glass is designed to shatter upon very strong impact and rather than producing sharp knife-like dangerous edges, it turns instead into small pebble-like pieces.)
- **Moving the unit:** Do not drag unit when moving, especially not on a carpeted surface or on a rug. It is always recommended instead to lift unit from both ends with a friend's help. For the sake of safety and to avoid damages, we recommend you remove the TV and all A/V components prior to moving this stand. If this is not possible please use much caution and good judgment and seek help to ensure stability and safety as the stand is being moved. Make sure afterwards to properly re-adjust all equipment, centered and stable as originally instructed above.

Congratulations and enjoy your new ELITE product!

To clean your unit, apply window cleaner with soft tissue. This will also eliminate slight surface abrasions or scratches that may have occurred in shipping or handling.

Distributed by: Elite Industries, 77 Gould Street • Bayonne, NJ 07002, Tel.: 201-436-1120 • Fax: 201-436-6960

Elite Industries ensures complete satisfaction with this product. In the event of missing or damaged parts call toll free, **Customer service hours: 8:45-4:45, Monday-Friday, EST., 1-800-ELITE-48**

VISIT OUR WEBSITE AT: www.elite-inds.com