

DB

HIGH PERFORMANCE
FURNITURE FOR YOUR
HOME THEATER



Your Deploy™ Home Theater Furniture is engineered for easy assembly. Carefully follow this procedure to prevent any damage.

Component List



A - Assembled Frame x 1



B - Allen Wrench x 1



C - Back Panel x 1



D - Shelf Pin x 4
(Models 9628, 9638) x 8




E - Rubber Bumper Inserts
(Models 9624, 9629, 9634,
9644, 9639, 9649) x 15
(Model 9640, 9640-1) x 18
(Models 9628, 9638) x 24




F - Threaded Knob x 4



G - Center Shelf Support x 1
(Models 9628, 9638) x 2

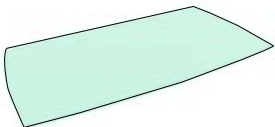

H - Center Glass Shelf x 2
(Models 9628, 9638) x 3

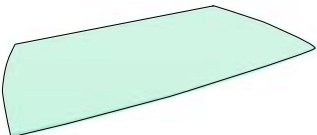

I - Top Glass Shelf x 1



J - Velcro Strap/Wood
Screws
(Models 9624, 9629, 9634,
9639, 9640, 9640-1, 9644,
9649) x 9
(Models 9628, 9638) x 12

Placement and Maintenance

Deploy™ Home Theater Furniture is designed for indoor use on level floors. Clean glass with glass cleaner, and steel parts and wood veneer with a moist cloth.

Step 1


Unpack and identify the parts listed above.

The assembly workspace should be a non-marring surface such as carpet. For missing hardware pieces, please contact BDI Customer Service at: customerservice@bdiusa.com

All other concerns please contact your local BDI Retailer.

Step 2


Unfold the metal legs on the **Assembled Frame (A)**. Install the **Shelf Pins (D)** into the desired location on the folding metal legs and the inside area of the wood frame using the **Allen Wrench (B)**. Install the **Rubber Bumper Inserts (E)** to the assembled frame.

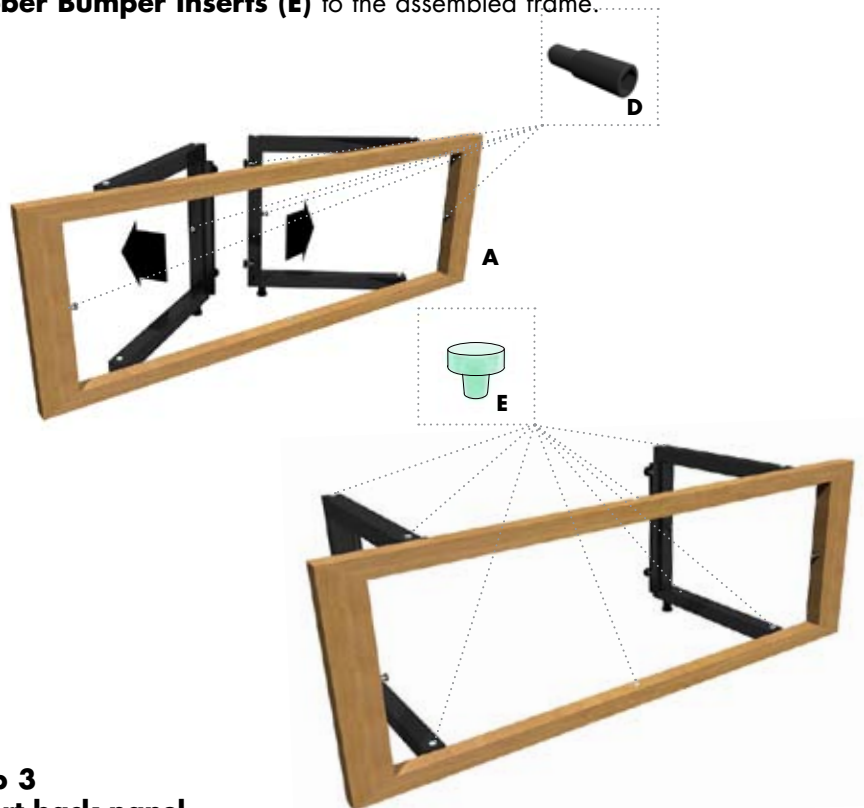

Step 3

Insert back panel.

Once the metal legs are opened, slide the **Back Panel (C)** down into the "U" channel.

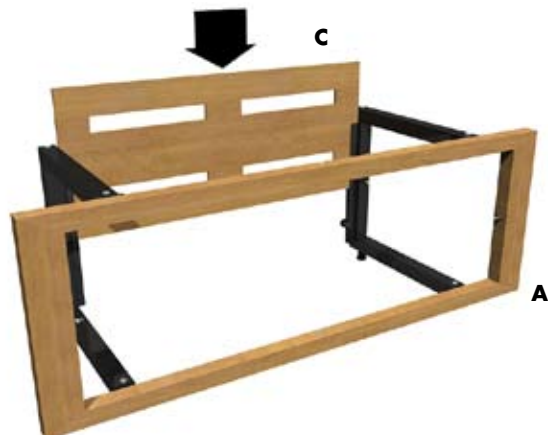


Step 4

Secure Back Panel

Then tighten the four **Threaded Knobs (F)** to secure back panel into position.


NOTE: Threaded knobs are included with the assembled frame.

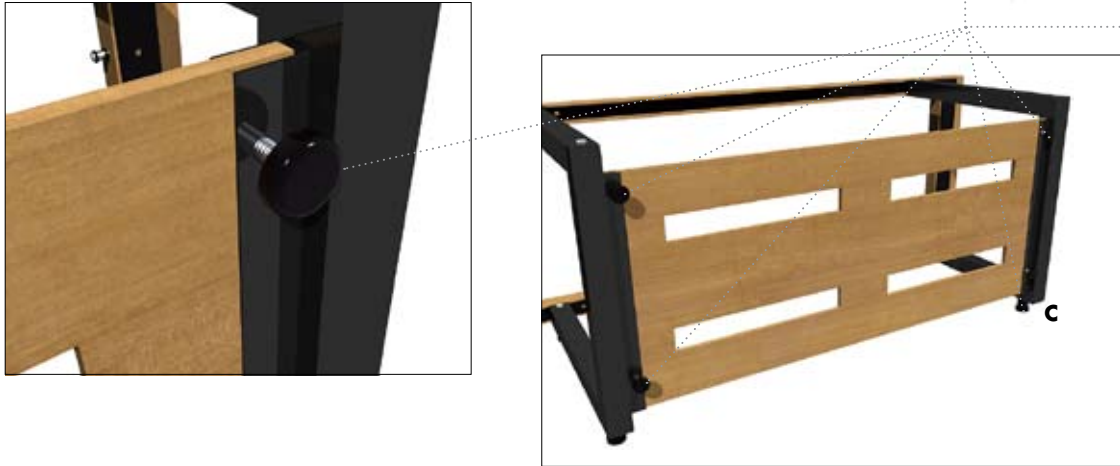

Step 5

Installing the Rubber Bumper inserts and Center Shelf Support


Install the **Rubber Bumper Inserts (E)** to all of the hole locations on the **Center Shelf Support (G)**. Then install the **Center Glass Shelf Support (G)** by placing on the previously installed shelf pins.

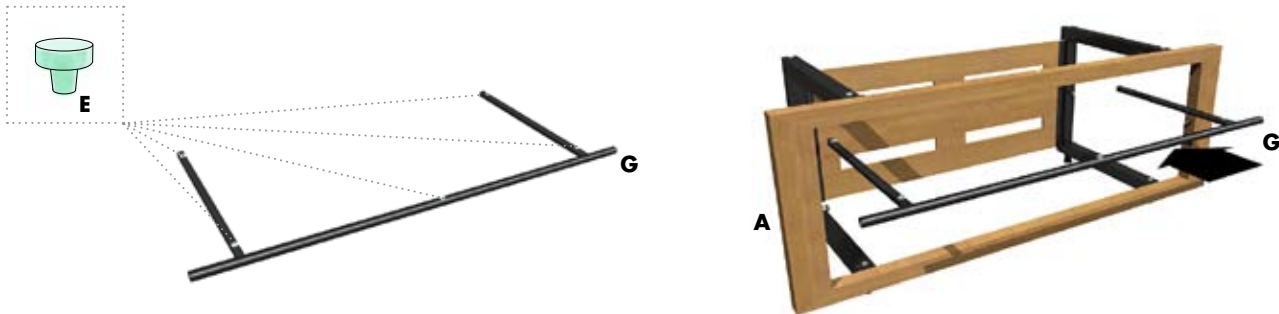

Step 6

Install the glass shelves.

Install the **Center Glass Shelves (H)** and **Top Glass Shelf (I)**.

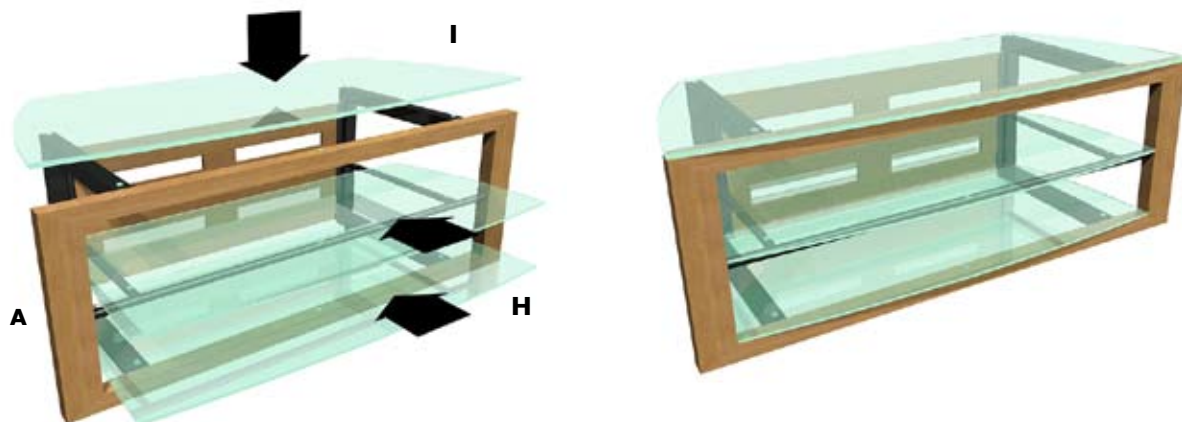

Step 7
Cable Management

Velcro straps and **small wood screws (J)** are supplied, and can be used for organizing cable management. On the rear side of the back panel, are pre-drilled holes for installing the Velcro straps using a **Phillips screw driver**.

